

Systems Controls & Instruments (UK) Ltd.

Manx House, Bousley Rise, Ottershaw, Surrey, KT16 0JX

Tel / Fax; +44 (0)1 93287 5227 & 5225:

E mail: info@sciuk.co.uk , Web: www.sciuk.co.uk

RT03 - Hand Held Remote Control

Daily Programme - Operating manual



Please read this manual carefully before use.

Index

General	1
On/Off	2
Fan Speeds	3
Modes	4
Temperature Set-Points	5
Real Time Clock and Day	6
Timer	7
Batteries Replacement	8

 
1. General

This is an Infra red Remote Control Unit, which means it must be pointed at the thermostat (or extra receiver) to operate.

Every time you change a parameter in the Remote Control, you must send it to the thermostat by pressing the "ON/SEND".

2. On/Off

- Press the ON/SEND button to activate the air conditioner / fan coil unit and/or updating information.



3. Fan Speeds

- Press the FAN button to switch between fan speeds:

- High Speed
- Medium Speed
- Low Speed







 
 
A

- Auto Speed
- Press the ON/SEND button to send information to thermostat.



4. Modes

- Press the MODE button to switch between:
 - Cool 
 - Heat 
 - Auto change-over 
 - Fan only 
- Press the ON/SEND button to send information to thermostat.









5. Temperature Set-Point

- Adjust the desired temperature using the (+) or (-) buttons.
- Press ON/SEND button to send information to thermostat.



6. Real Time Clock and Day

      - Press the SELECT button - CLOCK SET will flash.
- Press the (+) or (-) buttons - the hours will flash.
- Adjust the hours using the (+) or (-) buttons.
- Press the SELECT again - minutes will flash.
- Adjust the minutes using the (+) or (-) buttons.
- Press the SELECT again to return to normal display mode.
- Press the ON/SEND button to send information to the thermostat.



7. Timer

 **IMPORTANT:** If no button is pressed for 10 seconds the display will return to normal display mode.

Start Time:

- Press the SELECT button twice - PROGRAM & START (flashing) will appear on display.



- Press the SELECT button - the hours will flash.



- Adjust the hours using the (+) or (-) buttons.



- Press the SELECT button - the minutes will flash.



- Adjust the minutes using the (+) or (-) buttons.



Stop Time:

- Press the SELECT button - PROGRAM & STOP (flashing) will appear on display.



- Press the SELECT button - the hours will flash.



- Adjust the hours using the (+) or (-) buttons.



 
- Press the SELECT button - the minutes will flash.



- Adjust the minutes using the (+) or (-) buttons.




- Press the SELECT button - the TIMER will blink



- Select TIMER ON (black icon) or OFF (white icon) using the (+) or (-) buttons.



 - Press the ON/SEND button to send the information to the thermostat.



Important: when the Timer is active, and there is power failure to the thermostat, the display will show “ON” flashing.

8. Batteries Replacement

When the batteries are low, the display of the remote control will dim.

If the batteries will not be replaced the display will turn off completely.

Batteries replacement:

- Pull the batteries cover down to reveal the batteries.
- Remove the old batteries.
- **Wait for 10 minutes before installing the new batteries.**
- Install two new AAA batteries – Pay attention to the polarity.
- Return the batteries cover to place.



Important: The remote control will not operate unless at least 10 minutes pass between removing the old batteries and installing the new ones.